### [Maintenance Notice]

1.Please read this manual carefully before use.

2. Free services can be provided with warranty card and invoice, welcome to contact us if you need technical support.

3.Customers can get 1 year warranty service from us with product related invoice and documents.

4. Please keep the warranty card properly so that the warranty can be obtained when the product needs repair.

5. The company is not responsible for the following repair services beyond the product, but we can still provide you with paid services.

- Products due to improper use or storage.
- Products without warranty card or other valid documents.
- Products due to unstable power supply voltage or beyond the normal voltage range or power supply and installation does not meet the electrical installation requirements.
- Promotional products.
- Products damaged caused by irresistible natural disasters.
- Products beyond maintenance period, damaged due to not follow the rules and methods of application.

### [Fault Check]

Fault condition	Processing check		
Power and other indicator signals are not lit	Check if the power cords securely inserted into the unit and it is loose. Check the power outlet for power supply and check the 1.0 A standard (certified) fuse		
Plasma generator	Under normal circumstances, there is a slight current sound and black There is a faint blue light in the dark. If found. The ion tube bursts and the ion tube needs to be replaced. 0.5 A standard (with certified) fuse.		

Please send the following to the company's designated maintenance department for repairs.

- 1. The problem cannot be solved as described above.
- 2. Foreign matter or moisture enters, and abnormal conditions occur.

### **Technology Specification**

Model	TCA-HVAC25-AP	Power	14 W
Voltage	120V AC / 240V AC	Adapted air volume	6000 CFM
Application area	4000 sqft	Weight	3.1 Kg
Noise	≤20 dB	Ion Tube quantity	2
Size	192*192*430 mm	Ion tube size	350 mm(14inch )
Ion tube life	17000 Hours		

# Warranty Card

(Please keep it properly)

Product Name		Product Number			
Purchase Time		Contact Number			
Customer information	Name/company				
	contact address				
Sales company stamp :					



### **Plasma Air Disinfection Purifier**

Model: TCA-HVAC25-AP













#### [Precautions]

There are electronic devices installed inside, do not open the case to avoid the risk of electric shock. Please read this [user manual] carefully before using the machine and follow the below points of operation base on the manual. Otherwise It may cause damage to product, or even cause injury to yourself or others at varying degrees.


- This machine is designed for only indoor general using. Do not place it open-air or high temperature place.
- Before operating the machine, make sure the power cord is firmly plugged into the power outlet, and place the power cord in a safe position. Do not touch, install or unplug the power cord with wet hands to avoid electric shock accidents.
- Before unplugging the power cord, please turn off the machine power in the correct procedure, otherwise it may cause damage to the machine.
- If don't use the machine for a long time, please unplug the power supply.
   Before operation, please check whether the air inlet and outlet positions of the machine are blocked.
- Do not put debris at the air inlet or outlet, because there is the fan installed inside with high-speed rotation, it may caused injured if touch it.
- In order to ensure the best performance of the machine, do not place any obstacles within 1 meter nearby of the air outlet position and air introduction position.
- The machine has precision components built inside. Don't open the case by yourself to avoid damage to the machine parts and may happen dangerous.
- Do not dismantle the front wind panel or the chassis during machine is operating to avoid dangerous.
- Pay attention to ventilation when using it together with fuel appliances. Please do not use machine in the kitchen.
- Before cleaning the chassis of the machine, make sure turn off the power and unplug it of the machine. Only use cloth with a little clean water and clean it softly, don't use volatile cleaners.
- Forbidding to place and using in the bathroom, otherwise it may cause electric shock.

#### [Use & Characteristics]


- Shell is metal material.
- Plasma ions generator play a long-lasting and active positive and negative ion purification effect.
- This product can be used for a long-term.(Suggest clean the ion tube about 8500 Hours later.
- Suitable for small central air-conditioning (FAN-coil) or ventilation system piping, food processing/ preservation, catering, office buildings, shopping malls, hotelsAnd guest rooms, nursing homes, hospitals, public places, fresh air is not enough, prone to odor and bacteria places, etc.

### [ Pipeline Installation ]


- a) Mark size 140\*140mm on the pipe.
- b) Using scissors or metal shears to cut of the marking areas
- c) Using self-acting screw to fix the equipment on the pipe.



Horizontal hole pitch: 152mm
Vertical hole distance: 152mm
Pipe shear opening range: 140\*140mm

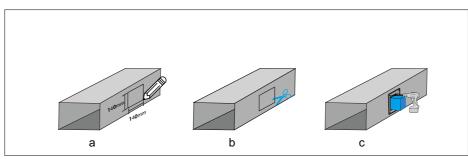


- 1.If the space is not enough, the equipment can't be installed in the pipe, please see the other install method below
- 2.Please choose the good airflow place
- 3. Turn on the power, the indicator light is on.
- 4. Rotary 1.2.3 switch to control ion quantity

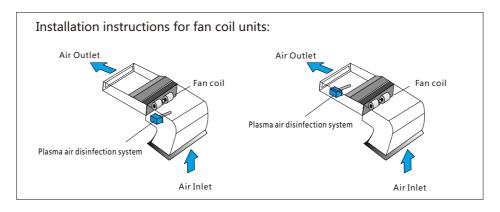

### **(Product Installation)**


1.Checking the product before install.plug in the power to test the equipment, If damaged in transit, please contact customer service in time

2. This product should not be installed in the air temperature more than 60°, preferably in a well-ventilated position.

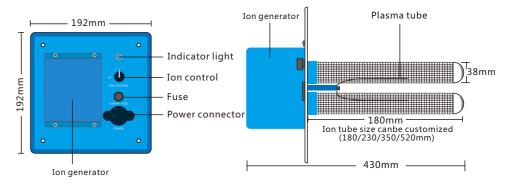

## [Replace the ion tube]

Note: Unplug the power before operation!

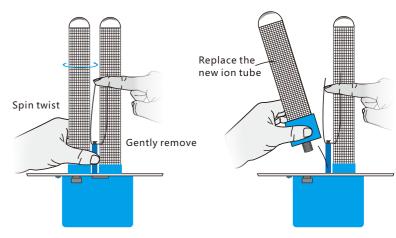

1.Gently move away the power sheet metal, Pinch the ion tube counterclockwise twist for a few turns, you can take it out.

2.Take the new ion tube clockwise twist.it canbe fixed,put back the power sheet metal on the ion tube,the replacement is completed.